

ZTE T630

Quick Start Guide

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC logo  is a trademark of the SD-3C, LLC.

 
Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0

Edition Time :August 24, 2015

Manual No. : 079584507510

Getting to Know Your Phone

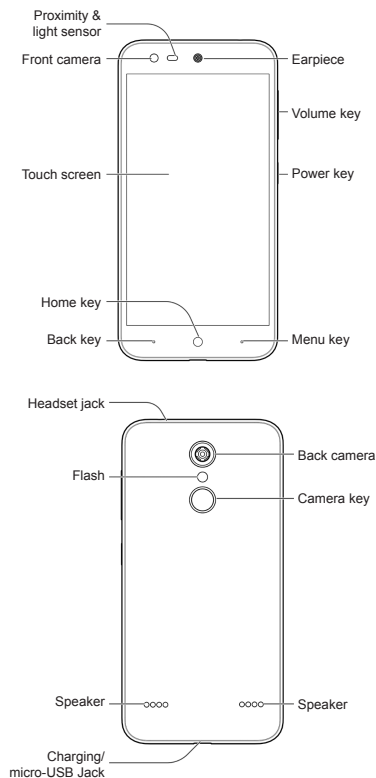

Power key

- Press and hold to power on, select phone modes, turn on/off airplane mode, power off or restart your phone.
- Press to turn off or on the screen display.

Home key

- Touch to return to the home screen from any application or screen.
- Touch and hold to use Google search.

Menu key

- Touch to get the options for the current screen.
- Touch and hold to see the recently used apps.

Back key

Touch to go to the previous screen.

 
Volume key

Press or hold to turn the volume up or down.


Starting Up

Switch off your phone before installing or replacing the battery or the micro-SIM cards. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.

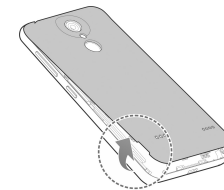

 
2. Hold the micro-SIM cards with its cut corner oriented as shown and slip it into the card holder.

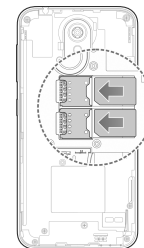

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.

 3. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot.

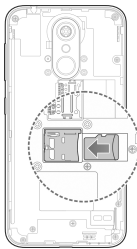


NOTE:

Your phone may come with a pre-installed microSDHC card. Some applications may not function normally after you remove the card.

4. Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

Charging the Battery

 1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

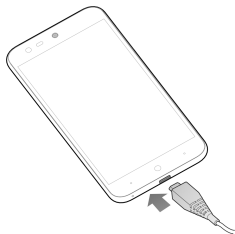

2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Ensure that the battery is charged before powering on.

- Press and hold the **Power** key to turn on your phone.
- To turn it off, press and hold the **Power** key to open the options menu. Touch **Power off** > **OK**.

Waking Up Your Phone

Your phone automatically goes into sleep mode when it is not in use for some time. The display is turned off to save power and the keys are locked to prevent accidental operations.

To quickly turn on the screen and unlock the keys, press the **Power** key and then swipe up.

NOTE:

If you have set an unlock pattern, a PIN or a password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock.










Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch
When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

- Touch and Hold
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- Swipe or Slide
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- Drag
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- Pinch
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- Rotate the screen
For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Product Safety Information

	Don't make or receive handheld calls while driving. Never text while driving.
	Don't use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Your phone may produce a bright or flashing light.
	Small parts may cause choking.
	Do not dispose of your phone in fire.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.
	Avoid extreme temperatures.

	Keep away from pacemakers and other electronic medical devices.
	Avoid contact with liquid. Keep your phone dry.
	Turn off when asked to in hospitals and medical facilities.
	Don't take your phone apart.
	Turn off when told to in aircrafts and airports.
	Only use approved accessories.
	Turn off when near explosive materials or liquids.
	Don't rely on your phone for emergency communications.