ZTE V795 Mobile Phone User Manual

LEGAL INFORMATION

Copyright © 2012 ZTE Corporation.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Version No.: R1.0 Edition Time: 2013.09.24

Contents

For Your Safety	7
General Safety	
Distraction	8
Driving	8
Operating Machinery	
Product Handling	
General Statement on Handling and Use	8
Small Children	
Demagnetization	10
Electrostatic Discharge (ESD)	
Antenna	
Normal Use Position	10
Air Bags	10
Seizures/ Blackouts	10
Repetitive Motion Injuries	11
Emergency Calls	
Loud Noise	11
Phone Heating	11
Electrical Safety	
Accessories	12
Connection to a Car	
Faulty and Damaged Products	12
Interference	12
General Statement on Interface	
Pacemakers	12
Hearing Aids	
Medical Devices	
Hospitals	13
Aircraft	13
Interference in Cars	
Explosive Environments	14

Petrol Stations and Explosive Atmospheres Blasting Caps and Areas	14
RF Exposure	14
Specific Absorption Rate (SAR)	
Body Worn Operation	
Getting Started	
Overview	
Keys Explained	
Starting up	
Installing the SIM/SD Card and Battery	17
Removing the Battery and SIM/SD Card	19
Charging the Battery	19
Switching Your Phone On/Off	20
Setting Up Your Phone for the First Time	
Switching to Sleep Mode	
Waking Up Your Phone	
Getting Around Your Phone	
Touch Control	
Home Screen	
Status and Notification Icons	
Using the Notification Panel	23
Phone Calls	
Making Calls	23
Calling from the Phone	
Calling from Your Contacts	24
Calling from Your Call History	24
Calling from a Text Message	24
Receiving Calls	25
Answering a Call	25
Rejecting a Call	25
Muting a Call	
Turning the Speakerphone On/Off	25

Ending a Call	25
Contacts	25
Creating a Contact	26
Searching for a Contact	26
Messaging	
The Message Box	26
Sending a Message	27
Message Settings	27
Touch Input Settings	28
Adding a New Network Connection	28
Turning On Wi-Fi	
Connecting to a Wi-Fi Network	
Checking the Wi-Fi Network Status	29
USB tethering & portable hotspot	29
Enabling USB tethering	
Disabling USB tethering	
Enabling the Wi-Fi Hotspot	
Disabling the Wi-Fi Hotspot	30
Browsing the Internet	30
Browsing Options	
Using Bookmarks	
Editing a Bookmark	
Deleting a Bookmark	
Changing Browser Settings	32
Bluetooth	32
Making the Most of Multimedia	
Taking Pictures with Your Camera	
Shooting Video with Your Camcorder	
Listening to Your FM Radio	
Playing Your Music	
Opening Your Gallery	
Making Voice Memos	54

Using Your Google Applications	35
Gmail	35
Using Google Talk	35
Sorting out Your Phone Settings	36
Setting Date and Time	36
Display Settings	
Sound Settings	
Language Settings	
Switching Network Modes	37
Switching Networks	
Setting Access Point Names	
Security Settings	
Protecting Your Phone with a Pattern	
Protecting Your Phone with a PIN or Password	
Disabling Screen Unlock Security	39
Protecting Your SIM Card with a PIN	
Setting up Credential Storage	40
Managing Your Device Memory	40
Privacy: Reset to Factory Settings	
Applications	
Installing an Application	41
Removing an Application	
Moving an Application	
Managing Other Settings	
Voice Input and Output	
Accessibility	
Other Applications	
Alarms	
Calculator	
Declaration of RoHS Compliance	
Disposal of Your Old Appliance	
EC Declaration of Conformity	

For Your Safety General Safety

A	Don't make or receive handheld calls while driving. And never text while driving.	A	Don't use at petrol stations.
1 -6	Keep your phone at least 15 mm away from your ear or body while making calls.	эў:	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.	*	Don't dispose of your phone in fire.
E Sta	Your phone can produce a loud sound.	S.	Avoid contacting with anything magnetic.
R	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
¢	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.	J.C	Don't take your phone apart.

*	Switch off when near explosive materials or liquids.	@ ⊐	Only use approved accessories.
1	Don't rely on your phone for emergency communications.	<u>م</u>	To prevent possible hearing damage, do not listen at high volume levels for long periods.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

 Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [20] and maximum + [50] degrees Celsius.
- The phone's normal operating temperature is 0°C ~ 40°C . In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.
- The product shall only be connected to a USB interface of version USB2.0.
- **CAUTION** : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory. Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

RF Exposure

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W / kg and the highest SAR value for this device when tested at the ear was 0.638 W / kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.


The tests are carried out in accordance with EN 62209-1-2006.

Body Worn Operation

Important safety information regarding radio frequency (RF) radiation exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Getting Started Overview

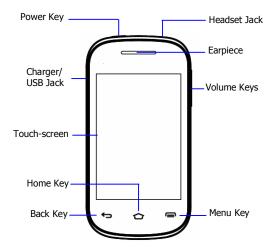

Keys Explained


Key	Function		
Power Key	 Hold to turn on or off Silent or Airplane mode, or to power off. Press to switch your phone to Sleep mode. Press to wake up your phone. 		
Home Key	Press to return to the Home Screen from any application or screen.		
Menu Key	Press to get the options for the current screen.		
Back Key	Press to go to the previous screen.		
Volume Keys	Press or hold to turn the volume up or down.		

Starting up


Installing the SIM/SD Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.


1. Remove the back cover.




Hold the SIM card with the cut corner oriented as shown, and slip it into the card holder.



3. Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position.



 Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



5. Press the cover gently back into place until you hear a click.

Removing the Battery and SIM/SD Card

- 1. Make sure that your mobile phone is off.
- 2. Remove the back cover.
- 3. Lift the battery up and out.
- 4. Slide the SIM card out.
- 5. Slide the SD card out.

Charging the Battery

When you first get your new phone you'll need to charge the battery.

- Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
- 2. Connect the charger to a standard AC wall outlet.
- 3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold Power Key to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

Tap **Menu Key** in the standby mode, then select **Settings** > **Language & keyboard** > **Select language** to change the language you want to use, if needed.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

- 1. Press **Power Key** to activate your screen display.
- 2. Long press the unlock icon to unlock the screen.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings* – *Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

- 1. Tap the buttons, icons, or applications to select items or to open applications.
- 2. Flick the screen to scroll up, down, left or right.
- 3. Hold and drag to move particular items across the screen.
- Double-tap the screen to zoom in/out an image. Pinch on with two fingers to zoom in/out a web page.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

Choosing Your Wallpaper

- 1. Press Home Key to return to the Home Screen.
- 2. Tap Menu Key and select Wallpaper.
- Tap Gallery, Live Wallpapers or Wallpapers and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
- 4. Tap Set wallpaper.

Adding Items to Your Home Screen

- Press Home Key > tap to enter the Application Program Interface.
- In the list of applications, touch and hold the icon until its vibration, when the main screen appears, move the application icon to the idle position, release the finger.

Removing Items from Your Home Screen

- 1. Press Home Key to return to the Home Screen.
- Tap and hold the item you want to delete until the icon appears on the screen.
- 3. Drag the item to the remove icon and release your finger when the item turns red.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

Ý	USB connected	ž	Missed call
≁	Airplane mode		Signal strength
	Signal searching	- (;	New message
	Battery charge	-1)	Wi-Fi network
Ø	Alarm set	•	Earphone insert

×	Silent mode		Meeting mode
*	Bluetooth icon	Ĭ	USB debugging connected
₽	Data Conn off	?	New Wi-Fi network detected

Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

Open Recently-Used Applications

- Hold Menu Key from any screen. The phone will display icons of applications you used recently.
- 2. Tap the application you want to open.

Phone Calls Making Calls

There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone

1. Press **Home key** > tap **M** > **Phone** or tap **O** on the Home Screen.

Enter the phone number using the on-screen keypad. 2.

Tap **I** to delete wrong digits.

3. Tap the dial icon.

TIPS: To make international calls, hold 0^+ to enter the "+".

Calling from Your Contacts

- Press **Home key**> tap **M** > **Contacts**. 1.
- 2. Slide your finger to scroll the contacts list and tap the contact vou want to call.

You can search for a contact by tapping 🔍 on the top of the screen.

3. Tap the dial icon.

Calling from Your Call History

- 1. Press Home key > tap 🔛 > Phone.
- 2. Tap the call log to dial the number.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

- Press Home key > tap 📩 > Messaaina. 1.
- 2. Tap the conversation and then find the message that contains the phone number you need.
- 3. Tap the message, the phone will list the options.





Receiving Calls

Answering a Call

Press **Answer** to answer the call (In addition to the locked interface).



Rejecting a Call

Press Reject to reject the call (In addition to the locked interface).

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them. Tap **Mute** to turn your microphone off. The mute icon will appear on the status bar. To turn your microphone back on, tap **Mute** again.

Turning the Speakerphone On/Off

Tap **Speaker** during a call to turn the speakerphone on. Tap **Speaker** again to turn off the speakerphone.

Ending a Call

Tap End to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing. To see your contacts, Press **Home key** > tap **M** > **Contacts**.

Creating a Contact

- Tap + or Menu Key > New contact from the Contacts Screen.
- 2. Choose the storage location to save the contact.
- 3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

- 1. Tap Son the top of the Contacts Screen.
- 2. Input the contact name you want to search for.

The contacts matched will be listed.

Messaging

Your SMS (text message) and MMS (multimedia messaging service)

are combined into one menu in Home Key > tap

The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

Sending a Message

- 1. Press Home key > tap 📩 > Messaging.
- 2. Tap Compose new message.
- 3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a

recipient. You can also tap 🔟 to select recipients from the contacts.

- 4. Tap **Type to message** and type your message.
 - Tap Menu Key to insert quick text, smiley, or contact.
 - If you are sending an MMS, tap Menu Key to add a subject, or attach pictures, videos, audio, or slideshows.
- 5. Tap **Send** to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

NOTE: From SMS settings screen tap **Menu Key > Restore default settings** to change all the message settings back to the original.

Touch Input Settings

Choose the touch input settings by tapping Home key > tap \square > Settings > Language & keyboard from Home Screen. In the **Keyboard settings** section, you can choose the settings that you need.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

You can view settings by pressing **Home key >** tap Settings > Wireless & networks > Mobile networks > Access Point Names

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

- Press Home key > tap 💾 > Settings > Wireless & 1. networks.
- Tick the **Wi-Fi** check box to turn it on. 2.

Connecting to a Wi-Fi Network

Press Home key > tap 📩 > Settings > Wireless & 1. networks > Wi-Fi settings.

The Wi-Fi access points, or "hotspots", that your phone has detected are displayed with their names and security settings.





2. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the 🔯 icon in the status bar.

USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press Home Key > tap Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and tick the USB tethering check box.

Disabling USB tethering

Press Home Key > tap Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and clear the USB tethering check box.

You can also just pull out the USB cable.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:

- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:
 - Press Home Key > tap Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and tick the Portable Wi-Fi hotspot check box.
 - Tap Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot to set up & manage portable Wi-Fi hotspot.
 - 3. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Press Home Key > tap Menu Key > Settings > Wireless & networks > Tethering & portable hotspot and clear the Portable Wi-Fi hotspot check box.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap **Markov** > **Browser**.

There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse.
 Then tap
- Tap Menu Key > Bookmarks and select a bookmark to open.

Browsing Options

When you browse the Web, you can also do the following:

- Tap the relevant icon to zoom in/out a Web page.
- Press Menu Key > Windows to open a window for web browsing.
- Press Menu Key > Close and select Quit to exit.
- Press Menu Key > Bookmarks and select a bookmark to open.
- Press Menu Key > More to do more operations (such as add bookmarks, downloads, or configure browser settings etc.).

Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu Key > Bookmarks**. Then tap **Add bookmark**. Give the bookmark a name and save it.

Editing a Bookmark

- 1. Open a Browser window.
- 2. Tap Menu Key > Bookmarks.
- Select an item you want to edit and hold on it until the shortcut menu pops up.
- 4. Select Edit bookmark.
- 5. Edit the name or location, and then save it.

Deleting a Bookmark

- 1. Open a Browser window.
- 2. Tap Menu Key > Bookmarks.
- 3. Select an item you want to delete and hold on it until the shortcut menu pops up.
- 4. Select **Delete bookmark** and tap **OK** to confirm.

Changing Browser Settings

Tap Menu Key > More > Settings from a browser window to change browser settings.

Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

Press Home Key > tap 🛃 > Settings > Wireless & 1. networks and tick the check box by Bluetooth to turn on Bluetooth.

When Bluetooth is on, the kind is appear in the status bar.

- 2. Tap Bluetooth settings > Scan for devices. Your phone will show all visible Bluetooth devices in range.
- Tap the device you want to pair with and, if required, enter the 3. wireless password or other BT device connection requirement. When the owner of the device to be paired to enter the same password or accept the connection, the pairing is completed.

TIPS: Tick the **Discoverable** check box to make your phone discoverable if other devices try to pair with your phone.

Making the Most of Multimedia Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing Home Key >

tap 🛃 > Camera.

Tap S to take a shot. To view it, just tap the picture in the right corner of the screen.

NOTE: You must insert the memory card before you use the camera. Before taking a picture, click the corresponding icon on camera screen to complete the camera-related settings.

Shooting Video with Your Camcorder

Open the camcorder by pressing **Home Key** > tap 📩 > Camera

> tap **2** >Camcorder.

Then tap 🚳 to start shooting, and tap 🕼 to stop. Select the

picture in the right corner of the screen to view the video you've just shot.

NOTE: You must insert the memory card before you use the camcorder.

Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio. To tune in, plug your headset into your phone. Press **Home key** > tap **S FM Radio.**

tap 📖 > **гм каdio.**

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

- Press Home Key >tap 2 > Music to open the Music Screen.
- 2. Click the Music category label > music files to start playing.
- 3. Adjust the volume with **Volume Keys**.

Opening Your Gallery

Press **Home Key** > tap **S Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.

Making Voice Memos

Sound Recorder enables you to record your voice memos.

- 1. Press Home Key > tap **Markov** > Sound Recorder.
- 2. Tap ot start recording.
- 3. Tap **I** to stop recording.
- 4. Tap to play back the voice recording.

Save the voice recording after stop, or tap **Discard** to delete the recording.

Using Your Google Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

- Tap a Google application that needs a Google account, such as Play Store.
- If you've got a Google account, tap Sign in. Enter your username and password. Then tap Sign in. (Or tap Create if you don't have a Google account.)

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:

Open **Gmail** by Pressing **Home Key** > tap 📩 > **Gmail**.

Using Google Talk

Google Talk is Google's instant messaging program, which enables you to communicate with other people who also use it. Press **Home**



Sorting out Your Phone Settings Setting Date and Time

- 1. Press Home key > tap **Settings > Date & time**.
- Clear the Automatic with network and Automatic with GPS check box if you want to set the time and date by yourself.
- 3. Set date, time and change the other options.

Display Settings

Press Home key > tap 📩 > Settings > Display, you can adjust the display settings as you like:

- Brightness: Adjust brightness of the screen.
- **Auto-rotate screen**: Rotate the screen display as you rotate the phone.
- Wallpaper: Choose window animation.
- Screen timeout: Set the delay for the screen to automatically turn off.

Sound Settings

By pressing **Home Key** > tap **11** > **Settings** > **Audio profiles**, you can select the profile, adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

- Press Home key > tap 2 > Settings > Language & keyboard > Select language.
- 2. Select a language from the list given.

Switching Network Modes

- Press Home key > tap 2 > Settings > Wireless & networks > Mobile networks > Network Mode.
- Select one of the following: GSM/WCDMA (auto mode), WCDMA only, or GSM only.

Switching Networks

- Press Home key> tap networks > Mobile networks > Network operators. The phone automatically searches for all available networks.
- 2. Tap a network to register manually, or tap **Select automatically**.

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.

Press Home key> Menu Key > Settings > Wireless & networks > Mobile networks > Access Point Names.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern Creating Your Screen Unlock Pattern

- Press Home key > tap 2 Settings > Security > Set up screen lock > Pattern.
- 2. Read the instructions on-screen and watch the example pattern, and select **Next** twice (if needed).
- 3. Drag your finger to connect at least four dots, draw the pattern.
- 4. Touch Continue.
- 5. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

- 1. Press **Power Key** to wake up the screen.
- 2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

Protecting Your Phone with a PIN or Password Creating a PIN or Password

- Press Home key > tap 2 > Settings > Security > Set up screen lock.
- 2. Tap PIN or Password.
- 3. Read the instructions and according to this instruction to complete your PIN or password settings.

Unlocking the Screen with Your PIN or Password

- 1. Press **Power Key** to wake up the phone.
- 2. Long press the unlock icon to unlock the screen.
- 3. Enter the PIN or password you set.

Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

- Press Home key > tap Settings > Security > Change screen lock.
- Draw the screen unlock pattern or enter your PIN/ password you have created.
- 3. Tap None.

Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.

- 1. Press Home key > tap 🛃 > Settings > Security > Set up SIM card lock.
- 2. Tick the Lock SIM card check box.
- 3. Enter the PIN you've been given and tap **OK**.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

- Press Home key > tap SIM card lock.
- 2. Make sure you already tick the **Lock SIM card** check box.
- 3. Tap Change SIM PIN.

Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

- Press Home key > tap 2 > Settings > Security.
- Tap Set password and create a password for the credential storage.
- 3. Tick the Use secure credentials box.

TIPS: You can also install encrypted certificates from your SD card.

Deleting Secure Credentials

- 1. Press Home Key > tap 📩 > Settings > Security.
- 2. Tap **Clear storage** to clear credentials.

Managing Your Device Memory

Press Home Key > tap 📩 > Settings > Storage.

You can view the space information of the SD card as well as the phone storage.

- Unmount SD card: You can unmount the SD card to safely remove it.
- Erase SD card: Erase all data on the SD card.

Privacy: Reset to Factory Settings

Press Home key > tap 📩 > Settings > Privacy > Factory data reset > Reset phone > Erase everything.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

Applications

Press Home Key > tap 📩 > Settings > Applications.

Installing an Application

You can install an application from the Play store (Home Key >

Play Store).

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

- Copy the application file to the SD card and install the card on your phone.
- Press Home key > tap 2 > File Manager, and open the folder where the application file is.
- 3. Tap the file to start installation.
- Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application

 Press Home key > tap 2 > Settings > Applications > Manage applications.

- 2. Select the application you want to delete.
- 3. Tap Uninstall and OK to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

- Press Home key > tap Settings > Applications > Manage applications.
- 2. Click the application you want to move on the **Downloaded** tab.

Managing Other Settings

Voice Input and Output

You can set the text-to-speech and voice recognition options by

pressing Home Key > tap 📩 > Settings > Voice input & output.

NOTE: You need to download voice data in order to use the text-to-speech function.

Accessibility

You can configure accessibility options for accessibility-related

applications by pressing **Home Key** > tap **Markov** > **Settings** > **Accessibility**.

Other Applications Alarms

- 1. Press Home key > tap 📩 > Clock.
- Tap the default alarm to configure it. Or to create a new alarm, tap Menu Key > Add alarm. When using the clock, use the following function:
 - Click 🔯 to enter the alarm screen.
 - Click 🖳 to access the album.
 - Click **D** to start the music player.
 - Click 🚳 to return to the standby screen.

3.Tick the **Turn alarm on** box and set up the alarm options.

Calculator

You can use the phone directly perform simple mathematical calculations.

- 1. Press Home Key > Tap 📩 > Calculator.
- Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Tap **Menu Key > Advanced panel** to use scientific calculation.

Declaration of RoHS Compliance


To minimise the environmental impact and take more responsibility for the earth we live on, this document shall serve as formal declaration that the ZTE V795 manufactured by ZTE CORPORATION is compliant with Directive 2002/95/EC of the European Parliament -RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- (1) Lead (Pb)
- (2) Mercury (Hg)
- (3) Cadmium (Cd)
- (4) Hexavalent Chromium (Cr (VI))
- (5) Polybrominated biphenyls (PBB's)
- (6) Polybrominated diphenyl ethers (PBDE's)

(Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of the substances listed above are below the maximum level set by EU 2002/95/EC, or are exempt due to their application.)

ZTE V795 manufactured by ZTE CORPORATION, meets the require-ments of EU 2002/95/EC.

Disposal of Your Old Appliance

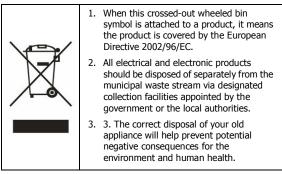

For this product's recycling information based on WEEE directive, please send an e-mail to <u>weee@zte.com.cn</u>

EC Declaration of Conformity

It is hereby declared that following designated product:

C€0700

Product Type: WCDMA/GSM (GPRS)

Dual-Mode Digital Mobile Phone

Model No: ZTE V795, ZTE Kis Q , ZTE Kis II

Complies with the essential protection requirements of Directives on Radio and Telecommunication Terminal Equipment (Directive 1999/5/EC), Restriction of the Certain Hazardous Substances in electrical and electronic equipment (Directive 2011/65/EU), Eco-design Requirements for Energy-Related Products (Directive 2009/125/EC) and their amendments. This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to Directive 1999/5/EC was performed by PHOENIX(Notified Body No.0700) and assessment of compliance of the product with the requirements relating to Directive 2011/65/EU and Directive 2009/125/EC was performed by ZTE Corporation Reliability Testing Centre. The assessments were based on the following regulations and standards:

Requirement	Standard	Report No.
Safety &Health	EN 60950-1:2006+A11: 2009+A1:2010+ A12:2011 EN50332-1-2000; EN50332-2-2003 EN 62209-1:2006, EN 62209-2:2010 EN 50360:2001/AC:2006 EN 62311:2008 EN 62479:2010	113GW9666-Safety 113GW9666-A 113GW9666-SAR
EMC	EN 301 489-1 V1.9.2:2011 EN 301 489-7 V1.3.1: 2005 EN 301 489-3 V1.4.1;2002 EN 301 489-3 V1.4.1;2002 EN 301489-17 V V2.1.1 :2009 EN 301 489-24 V1.5.1:2010	I13GW9666-EMC
Radio Spectrum	EN 301 511 V9.0.2 :(2003-03) EN301 908-1/-2 V5.2.1 EN 300328 V1.7.1: 2006 EN 300 440-1 V1.6.1; EN 300 440-2 V1.4.1;	I13GW9666-RF-GSM I13GW9666-RF-W I13GW9666-RF-BT I13GW9666-RF- WLAN I13GW9666-RF-GPS

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,

Nanshan District, Shenzhen, Guangdong, 518057, P.R. China

Authorised person signing for the company:

Xu feng Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 16 September 2013

Place & date

Legally valid signature